

# IntelliTouch™ Quick-Start Manual Set-Up and Programming

IMPORTANT SAFETY INSTRUCTIONS  
*READ AND FOLLOW ALL INSTRUCTIONS*  
SAVE THESE INSTRUCTIONS



## **⚠ WARNING**

Before installing this product, read and follow all warning notices and instructions which are included. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage. Call (800) 831-7133 for additional free copies of these instructions.

## **Important Notice**



Attention Installer.

This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

### **PentairPoolProducts**

1620 Hawkins Ave., Sanford, NC 27330 • (919) 774-4151  
10951 West Los Angeles Ave., Moorpark, CA 93021 • (805) 523-2400



*Because reliability matters most*



## In this Quick Start

**System Requirements ..... 3**

**Before You Start ..... 4**

**Check the Load Center ..... 5**

**Setting up the Indoor Control Panel ..... 6**

    Testing the Indoor Control Panel ..... 6

    Setting the Clock ..... 6

    Setting the Circuit Names ..... 7

    Assigning Circuit Functions and Freeze Protection ..... 8

    Setting up Additional Equipment ..... 10

    Configuring Spa-side Controls ..... 12

    Programming Timed Circuits ..... 13

**Other Available Equipment ..... 13**

**Notes ..... 14**

## System Requirements

This Quick Start helps you test and set up the IntelliTouch system. Use these instructions to make sure the system is working and properly set up for the homeowner.

This Quick Start is for the following systems:

- Wired only systems. If you are using a MobileTouch, this Quick Start is not for you.
- Only 1 expansion center. If you have multiple centers, this Quick Start is not for you.
- Only 1 iS10 **OR** multiple iS10s configured to the same circuits.

** CAUTION**

**DO NOT OPERATE ANY OF THESE CONTROLS BEFORE READING THESE INSTRUCTIONS.**

You can fold the Outdoor Control Panel downward to get to the rear circuit board while operating. In the unlikely event you need to plug in any low voltage devices, you must feed a cable up the Low Voltage Raceway on the left. Turn the power off and remove the High Voltage Cover Panel to make it easier to feed the cable.

## Important Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the party responsible for FCC compliance could void the users authority to operate the equipment.

## Before You Start

If you have more than 1 Indoor Control panel, you only need to configure 1 panel. Other Indoor Control panels will read that programming and use it.

Before you start, make sure you have:

- Pen and paper
- Marker or other way to label the circuits. Use the provided Circuit ID label sheet, a permanent marker, or other permanent means of labeling.
- If the system you are setting up is large or covers a large area, get an assistant to walk the property while you test the circuits


Setting up the IntelliTouch involves the steps detailed in the guide. Follow the steps in order to make sure the IntelliTouch is properly set up and working correctly.

## Check the Load Center

1. Turn on the electrical power at the house breaker.
2. Turn on the Load Center. You may need to turn on the breakers on the Load Center.
3. Wait for the following:
  - In the System Control lights area, only one light is on, usually the **Auto** light.
  - The light labeled **See Indoor Control Panel if Flashing** stops flashing.
4. Press the **Service** button to put the Load Center in Service Mode for testing.
 

**Note:** If you are working with the i5, i7+3, or i9+3 systems, go to step 5. If you are working with the i5S, i9+3S, or i10+3D systems, skip step 5 and go to step 6.
5. Press the **Valves** button. Step thru all 4 valve positions: Pool, Spa, Fill, Drain. Make sure the valves turn on correctly and the water is moving in the correct direction for each position.
6. Press the **Filter Pump** button. Make sure the filter pump turns on correctly. If the pump has 2 speeds: Press the button 1 time to run the pump in low speed. Press the button again to run the pump in high speed. Press the button again to turn the pump off.
7. Step through the rest of the system control buttons. Notice which button turns on which equipment. You may need to walk the property to find what each button turns on.
8. Write down what each button turns on, including the number of the circuit.
9. Label the circuit buttons on the outdoor control panel. You need this information when you set up the Indoor Control Panel.


When you are done, you are ready to set up the Indoor Control Panel. See the next section.

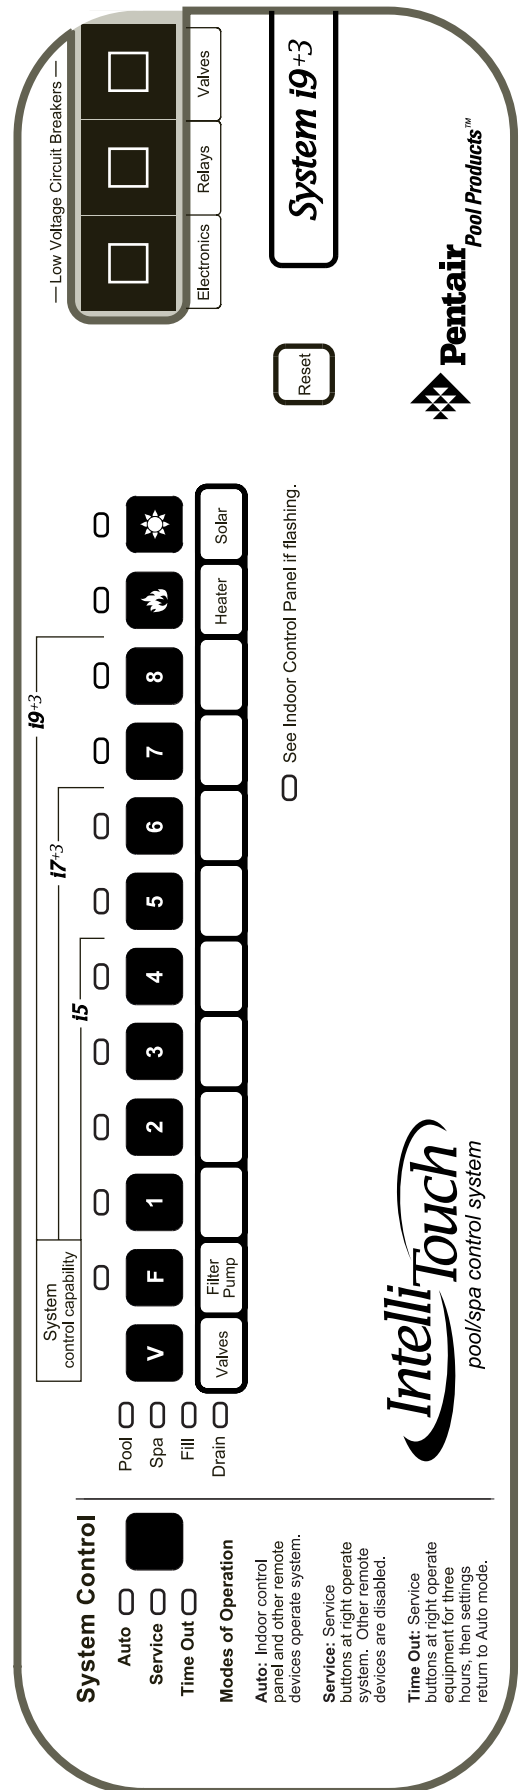

## Setting up the Indoor Control Panel

The Indoor Control panel looks like the following picture.

Select items on the screen by pressing the buttons on each side and the bottom.

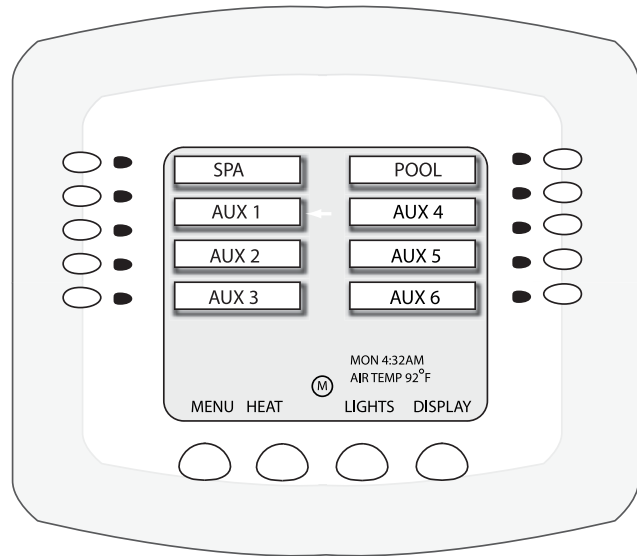


## Testing the Indoor Control Panel

Press the button in the upper left labeled either Spa or Hi-Temp, depending on the model of Indoor Control Panel. An LED turns on.

If none of the LEDs turn on, you have a problem. Contact Technical Service for help at 800-831-7133.


## Setting the Clock

Setting the clock lets all automatic pool functions work correctly.

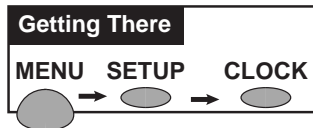


Go to the Clock screen.

1. Using the buttons on either side of the panel, set the time and date.
2. Specify the Daylight savings setting. If you are in an area that observes Daylight savings, set this to Auto. If you are in an area that does not observe daylight savings, set this to Manual.
3. When you are done, press the **Save** button.
4. Press the **Exit** button to return to the Main screen.

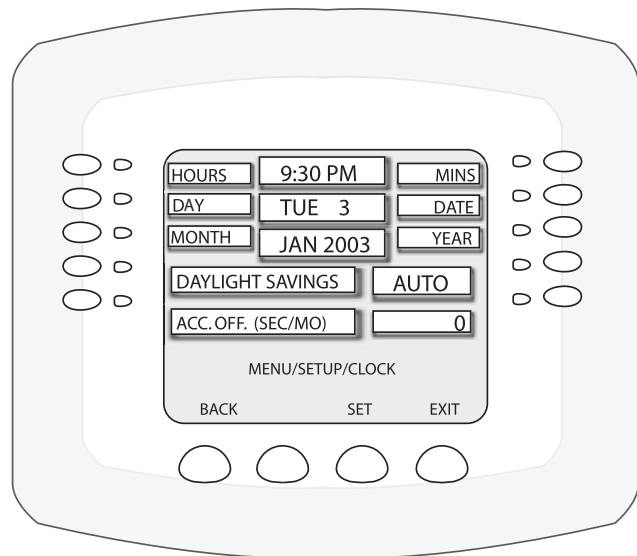



## Setting the Circuit Names

Setting the circuit names lets the homeowner use the pool equipment from the Indoor Control Panel. Many common equipment names are already programmed into the Indoor Control Panel. If you need to program custom circuit names, refer to the IntelliTouch Setup manual.

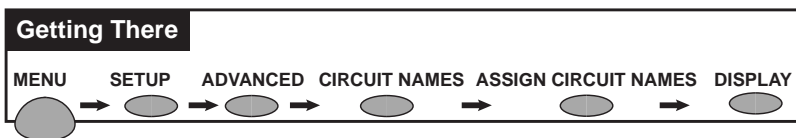

Go to the Assign Circuit Display screen.


1. Get the written list of circuit names you made while setting up the Load Center. Find what you labeled circuit button 1. The circuit names you assign must match the labels you put on the Load Center.
2. On the Assign Circuit Display screen, press the button next to the label **AUX 1**. You see a small arrow pointing to the name of that label.
3. Use the **Up** and **Down** buttons at the bottom of the screen to walk through the alphabetical list of programmed names.
4. When you find the name you want, press the button next to the label **AUX 2**. The small arrow moves to that label. You are done setting the first circuit name and are ready to program the next circuit.
5. Continue the process to assign the other circuits. Depending on the model you are programming, you may not have equipment for all circuits.
6. When you are done assigning names, press the **Save** button.
7. Press the **Exit** button to return to the Main screen.

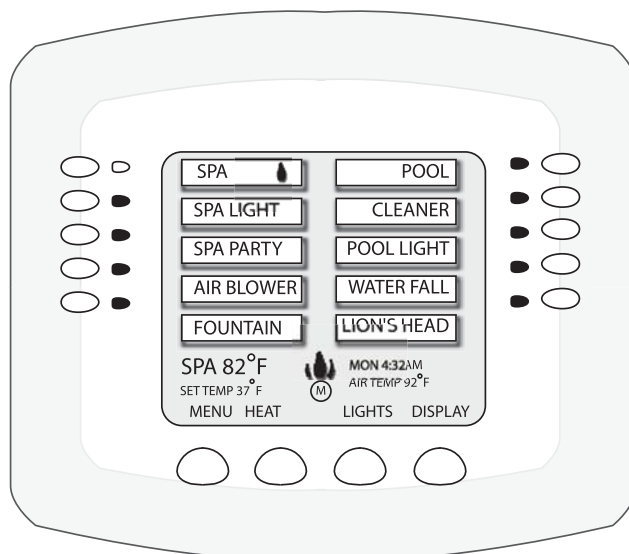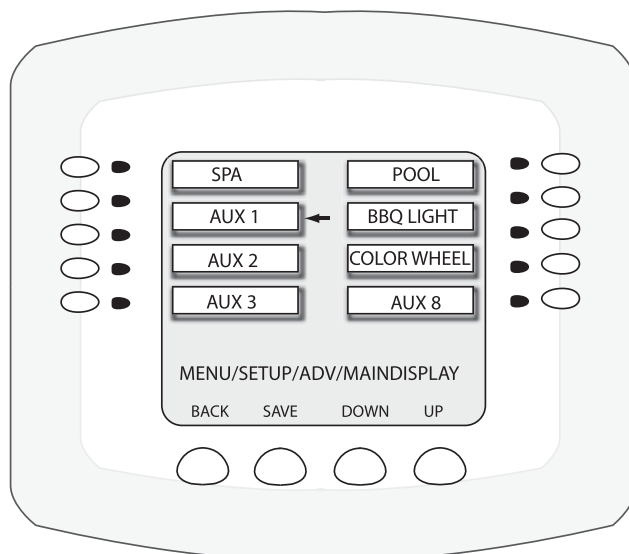

## Assigning Circuit Functions and Freeze Protection


Assigning circuit functions lets you set special logic to a circuit. For example, you can set up an automatic pool cleaner to only run if the filter pump is on. Further, the automatic cleaner pump will turn off when the spa and/or solar is turned on.

Freeze protection turns on a circuit if the air temperature drops below 35° F. This is especially important if there is a pool and spa combination. If freeze protection is set to both the spa and pool circuits, the filter pump comes on and the pool and spa valves alternate every 15 minutes to keep the water moving in both until the freeze condition is over.

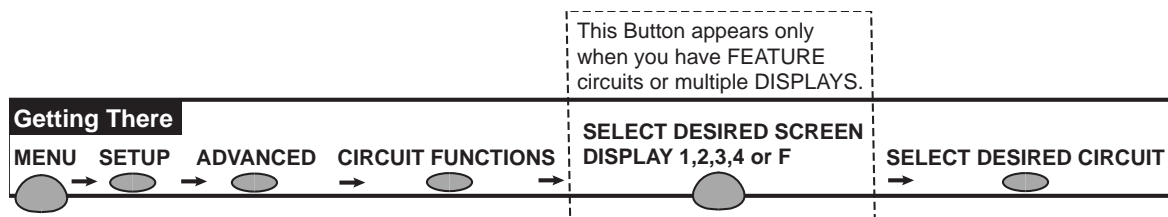

### To set the pool and spa freeze protection

1. Use the Getting There picture above. When you get to the Select screen, press **Pool**.
2. Find the **No** label. Press the button next to it to change the setting to **Yes**.
3. When you are done, press **Save**.
4. Press the **Back** button to return to the Circuits screen.
5. Press the button next to the label **Spa**, if there is a spa.
6. Find the **No** label. Press the button next to it to change the setting to **Yes**.
7. When you are done, press **Save**.
8. Press the **Back** button to return to the Circuits screen.
9. Repeat the above steps for any other circuits that you want to assign freeze protection.

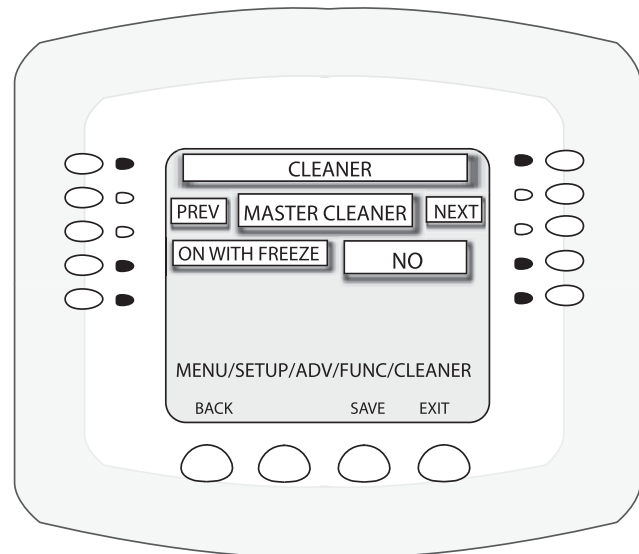



## To assign other logic to a circuit

1. Go to the Circuit Functions screen and select a circuit to assign special logic.

**Note:** You must set pressure cleaners to Master Cleaner circuit function.

2. Press the **Prev** or **Next** buttons to make your selections. The options are:

Generic	No special Logic. Simple On/Off control of a circuit with all the programmable capabilities.
Master cleaner	Works with automatic pool cleaner pumps or cleaner valve actuator. It does the following: <ul style="list-style-type: none"> <li>- Forces the filter pump on 5 minutes before the cleaner.</li> <li>- Turns the cleaner off when the spa is on.</li> <li>- Turns the cleaner off for 5 minutes when the solar heating begins.</li> </ul>
Light	Allows special lighting features to work, such as ALL lights on or ALL lights off.
Dimmer	Allows light dimming features to work. Dimming relay must be installed.
SAM Light	Activates special color lighting programs on other screens on the Indoor Control Panel when used with SAM pool lights. For example, you can have ALL lights on or ALL lights off, or use Color Swim, Color Set, or Color Synch.
SAL Light	Activates special color lighting programs on other screens on the Indoor Control Panel when used with SAL spa lights. For example, you can have ALL lights on or ALL lights off, or use Color Swim, Color Set, or Color Synch.
Photon Generator	Lets Pentair Fiberworks fiber optic bulb be operated by Color Set or Color Swim programs when used with SAM and SAL lighting.
Color Wheel	Activates special color lighting programs on other screens on the Indoor Control Panel when used with Pentair Fiberworks. For example, you can have ALL lights on or ALL lights off, or use Color Swim, Color Synch, or Color Set.
Valve	Not currently used.
Spillway	For pool/spa combinations where the spa is raised above the pool. This setting moves the return valve so that the filter pump pulls the water from the pool and returns it to the spa, creating a water fall effect. Automatic pool cleaners are turned off when this feature is turned on.
Floor Cleaner	This setting moves a 3-way valve every 20 minutes alternating flow between 2 cleaner system valves that feed the pop-up heads.

3. When you are done, press **Save**.
4. Press the **Exit** button to return to the Main screen.


## Setting up Additional Equipment

If any special equipment is attached, you need to set that up now. You may or may not have this equipment.

This section explains setting up the following:


- Solar or heat pump equipment - Lets you set solar or heat-pump heaters to work.
- 2 speed pump - Lets you set circuits that switch the filter pump to high speed.
- Cool-down cycle for the heater - Lets you set a cool-down cycle for heaters that need it.
- Automatic spa heating when the spa is manually turned on - Heats the spa using the Spa button on the Indoor Control panel or the spa-side control, even when the heater is set to OFF in the Heat screen. This lets the homeowner heat the spa on-demand. Timed programs will not heat the spa.

### To set up the solar equipment

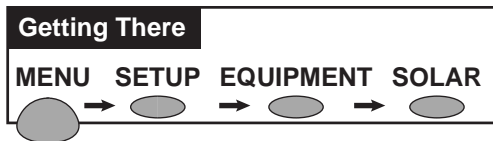


Go to the Solar screen.

1. Press the button next to the **Water Solar Present** label to change it to Yes.
2. If a heat pump is being used instead of a solar heating system, press the second button to change it to Yes.
3. When you are done, press the **Save** button.
4. Press the **Exit** button to return to the Main screen.

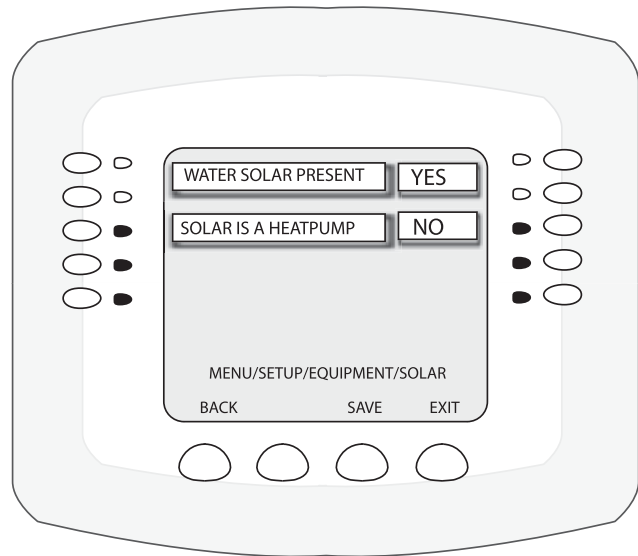


### To set up a 2 speed pump

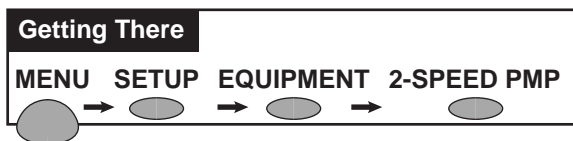


Go to the 2 Speed Pump screen.

1. Press the button next to a **None** label. You see a small arrow pointing to the name of that label.

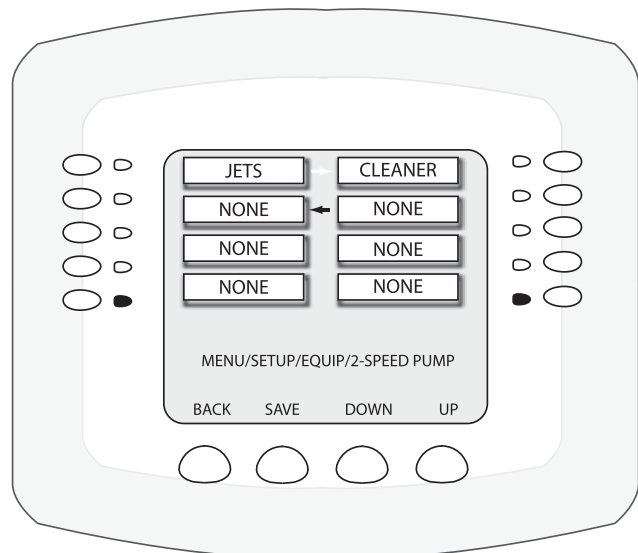


2. Use the **Up** and **Down** buttons at the bottom of the screen to step through the alphabetical list of programmed names.
3. When you find the names you want, press the **Save** button.
4. Press the **Exit** button to return to the Main screen.

**To set a cool-down cycle for the heater**

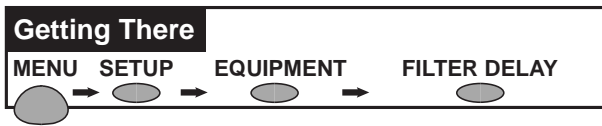

Go to the Filter Delay screen.

1. Find the **Master Spa/Pool** label. Press the button next to it to change the setting to **Yes**.
2. When you are done, press the **Save** button.
3. Press the **Exit** button to return to the Main screen.

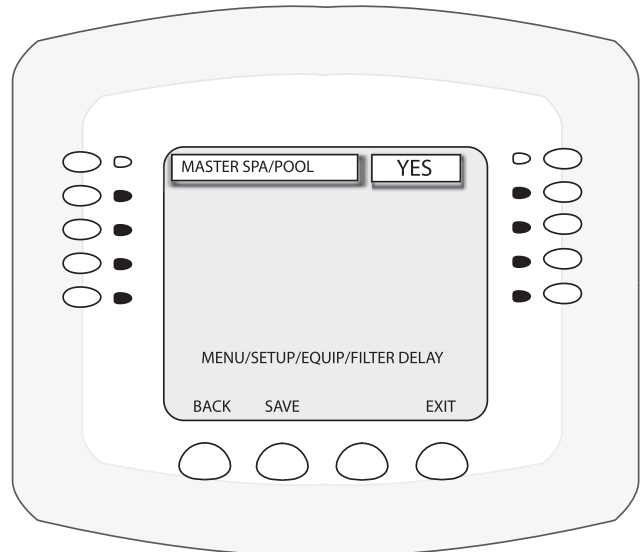


**To set automatic spa heating when the spa is manually turned on**



Go to the Manual Heat screen.



1. Find the **Spa Manual Heat** label. Press the button next to it to change the setting to **Yes**.
2. When you are done, press the **Save** button.
3. Press the **Exit** button to return to the Main screen.

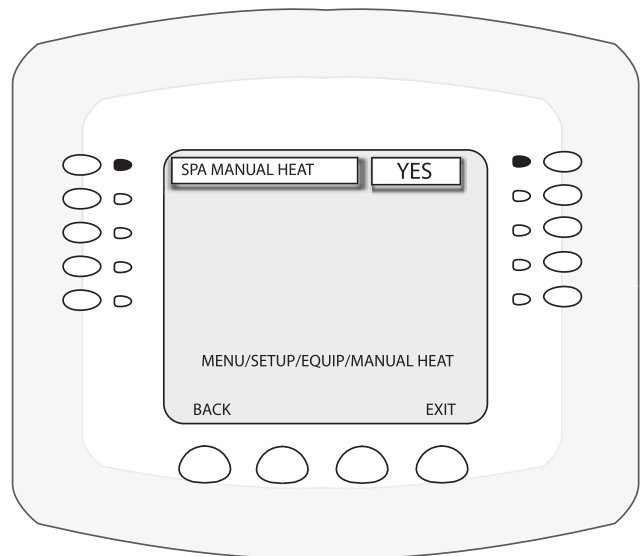

## Configuring Spa-side Controls


You can configure any spa-side control to specify which button on the control activates which function.

Depending on which spa-side control is installed, you see a slightly different screen. All screens configure the same, regardless of how many buttons the control has.

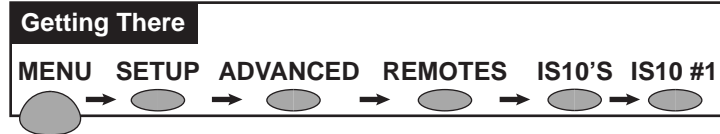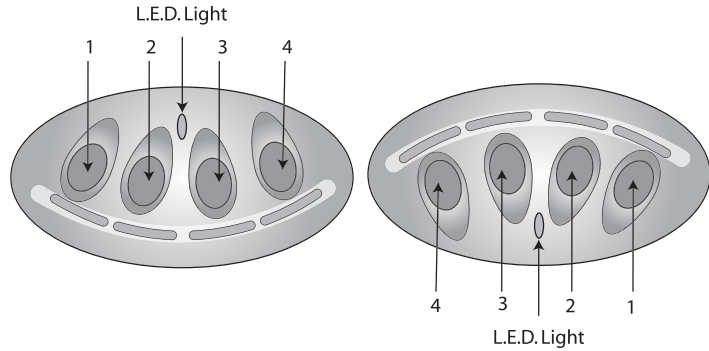


Go to the Spa Side Control Configuration screen and select the spa-side control you have.

1. On the Remote specific screen, press the button next to the circuit you want to change. You see a small arrow pointing to the name of that circuit.
2. Use the **Up** and **Down** buttons at the bottom of the screen to walk through the alphabetical list of assigned circuit names.
3. When you find the circuit you want, press the button next to another spa-side control button circuit you want to change. The small arrow moves to that label. You are done setting the first spa-side control button circuit and are ready to set the next.
4. Continue the process to assign other circuits to the spa-side control buttons.
5. When you are done assigning circuits to the buttons on the spa-side control, press the **Save** button.
6. Press the **Exit** button to return to the Main screen.

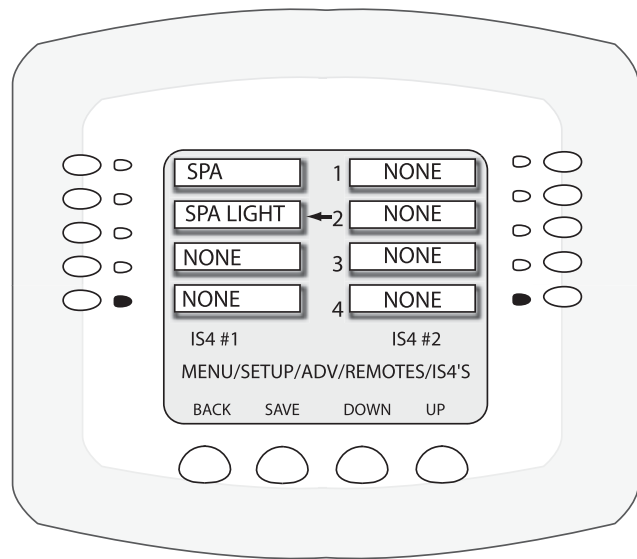

iS4 shown above

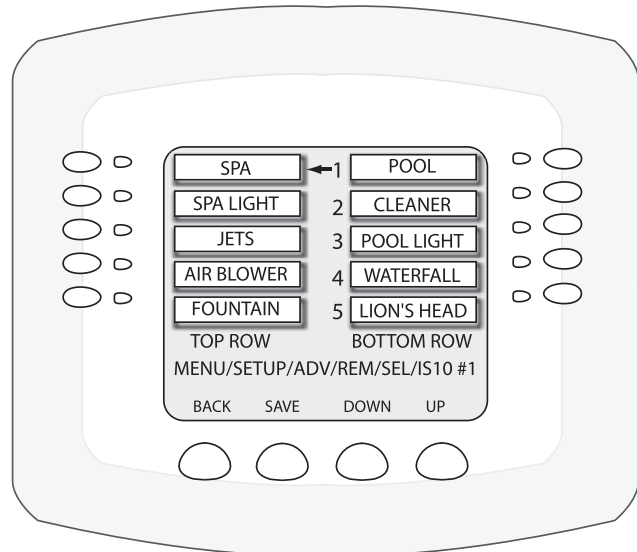


iS10 shown above

## Programming Timed Circuits


You can set timers to automatically run equipment like pool filtration or lights. You can set the time the equipment turns on and off as well as the days of the week.

This section shows you how to set the timer for the pool filtration system but the process is the same for any equipment listed.

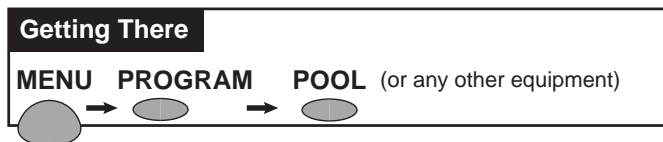

Go to the Program Pool Timer screen.

- To set the start time, find the top **Hours** label. Press the left button to change the hour. Press the right button to change the minutes.
- To set the stop time, find the bottom **Hours** label. Press the left button to change the hour. Press the right button to change the minutes.
- If you want the timer to work only on certain days, find the **Days** label. Press either button next to the label. You see a screen with the days of the week listed. The LEDs next to each day name are lit.
  - To turn off a day, press the button next to the day name you don't want. The light turns off. To set all days to on, leave all the LEDs lit.
- When the day names you want are lit, press **Save**.
- When you are done, press the **Save** button.
- Press the **Exit** button to return to the Main screen.

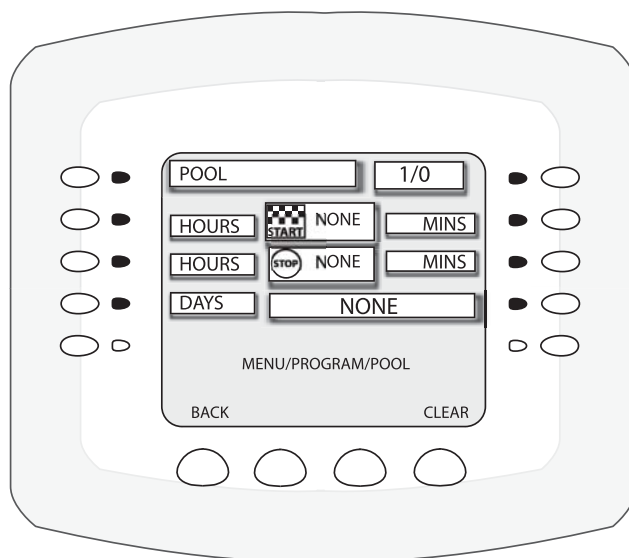

## Other Available Equipment

Other equipment can be installed or set up, such as setting up Swimming Colors™, setting Feature Circuits™, macros to combine circuits, setting a remote control that works by phone, and much more.

For more information about setting up these features, refer to the Set up and Programming Manual.

---

## Notes

Use this page to take notes or write down important information while you configure the IntelliTouch system. For example, you can write down the names of circuits.

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## LIST OF CIRCUIT NAMES IN THE INTELLITOUCH SOFTWARE

AERATOR  
 AIR BLOWER  
 AUX 1  
 AUX 2  
 AUX 3  
 AUX 4  
 AUX 5  
 AUX 6  
 AUX 7  
 AUX 8  
 AUX 9  
 AUX 10  
 BACKWASH  
 BACK LIGHT  
 BBQ LIGHT  
 BEACH LIGHT  
 BENCH  
 BLOWER  
 BOOSTER PUMP  
 BUG LIGHT  
 CABANA LTS  
 CHEM. FEEDER  
 CHLORINATOR  
 CLEANER  
 COLOR WHEEL  
 DECK LIGHT  
 DRAIN LINE  
 DRIVE LIGHT  
 EDGE PUMP  
 ENTRY LIGHT  
 FAN  
 FIBER OPTIC  
 FIBERWORKS  
 FILL LINE  
 FLOOR CLNR  
 FOGGER  
 FOUNTAIN  
 FOUNTAIN 1  
 FOUNTAIN 2  
 FOUNTAIN 3  
 FOUNTAINS  
 FRONT LIGHT  
 GARDEN LTS  
 GAZEBO LTS  
 HIGH SPEED  
 HIGH TEMP  
 HOUSE LIGHT

JETS  
 LIGHTS  
 LOW SPEED  
 LOW TEMP  
 MALIBU LTS  
 MIST  
 MOTOR VALVE  
 MUSIC  
 (NOT USED)  
 OZONATOR  
 PATH LIGHTS  
 PATIO LTS  
 PERIMETER L  
 PG2000  
 POND LIGHT  
 POND PUMP  
 POOL  
 POOL HIGH  
 POOL LIGHT  
 POOL LOW  
 POOL SAM  
 POOL SAM 1  
 POOL SAM 2  
 POOL SAM 3  
 SECURITY LT  
 SLIDE  
 SOLAR  
 SPA  
 SPA HIGH  
 SPA LIGHT  
 SPA LOW  
 SPA SAL  
 SPA SAM  
 SPA WTRFLL  
 SPILLWAY  
 SPRINKLERS  
 STREAM  
 STATUE LT  
 SWIM JETS  
 WTR FEATURE  
 WTR FEAT LT  
 WATERFALL  
 WATERFALL 1  
 WATERFALL 2  
 WATERFALL 3  
 WHIRLPOOL  
 WTRFL LGHT  
 YARD LIGHT

USER NAME 01 \_\_\_\_\_  
 USER NAME 02 \_\_\_\_\_  
 USER NAME 03 \_\_\_\_\_  
 USER NAME 04 \_\_\_\_\_  
 USER NAME 05 \_\_\_\_\_  
 USER NAME 06 \_\_\_\_\_  
 USER NAME 07 \_\_\_\_\_  
 USER NAME 08 \_\_\_\_\_  
 USER NAME 09 \_\_\_\_\_  
 USER NAME 10 \_\_\_\_\_  
 USER NAME 11 \_\_\_\_\_  
 USER NAME 12 \_\_\_\_\_  
 USER NAME 13 \_\_\_\_\_  
 USER NAME 14 \_\_\_\_\_  
 USER NAME 15 \_\_\_\_\_  
 USER NAME 16 \_\_\_\_\_  
 USER NAME 17 \_\_\_\_\_  
 USER NAME 18 \_\_\_\_\_  
 USER NAME 19 \_\_\_\_\_  
 USER NAME 20 \_\_\_\_\_

For questions, repairs, replacement parts, or information on possible Authorized Service Centers within your vicinity call:

**Pentair Pool Products ~ 800-831-7133**

**Or visit us on the Internet at [www.pentairpool.com](http://www.pentairpool.com)**

***Pentair Pool Products***

1620 Hawkins Ave., Sanford, NC 27330 • (919) 774-4151  
10951 West Los Angeles Ave., Moorpark, CA 93021 • (805) 523-2400



*Because reliability matters most*